Your reliable integrated video surveillance solutions

How to set System Time & DST?

Answer:

Manually Setting or Synchronizing the System Time

1. Click **Setup > Common > Time**, and then click the **Time** tab.

Sync Mode	Sync with Latest Server Time	
Time Zone	(UTC) London, Casablanca, Coordinated Universal Time	
System Time	2017-09-12 08:07:09 Sync with Computer Time	

2. Select a synchronization mode.

3. Set the correct time zone and system time. You may also click **Sync with Computer Time** to synchronize the time settings of your camera with that of your PC.

4. Click Save.

Synchronizing with the NTP Server

1. Click **Setup > Common > Time**, and then click the **Time** tab.

Sync Mode	Sync with NTP Server	~	
Time Zone	(UTC) London, Casabland	~	
System Time	2018-05-10 08:48:53	Sync with Computer Time	
NTP Server			
NTP Server Address	0.0.0.0		
Port	123		
Update Interval(s)	600		

2. Set **Sync Mode** to **Sync with NTP Server**, and then set the IP address and port of the NTP server and update interval.

3. Click **Save**. The camera will periodically synchronize time with the NTP server.

Setting the DST

1. Click **Setup > Common > Time**, and then click the **DST** tab.

DST				
DST	On Off			
Start Time	Apr 💌 First 💌 Sun 💌 02	💌 h		
End Time	Oct 💌 Last 💌 Sun 💌 02	💌 h		
DST Bias	60mins	-		

2. Select **On** for **DST**, set the start time, end time, and DST bias.

3. Click Save.

TAGS:

Time setup, common setting, system time, time sync, time zone, NTP server, DST, DST bias





"Your Reliable Integrated Video Surveillance Solutions Provider"

Shenzhen Starlink Technology Co. ,Ltd.

1811, Block A, Zhantao Technology Building, Longhua District, P.R.China 518131
Email: info@qixingtechnology.com; qixing@qixingtechnology.com
http://www.www.qixingtechnology.com
©2009-2018 Shenzhen Starlink Technology Co.,Ltd. All rights reserved.
*Product specifications and availability are subject to change without notice.