


How to set Scene Change Detection?

Answer:

Note: Only some certain models support this function. Please see the actual model for details.

Note: This function, management page and supported alarm triggering and arming schedule may vary with models. Please see actual Web interface for details.

1. Click **Setup > Intelligent > Smart Settings**. Choose **Scene Change** and then click .

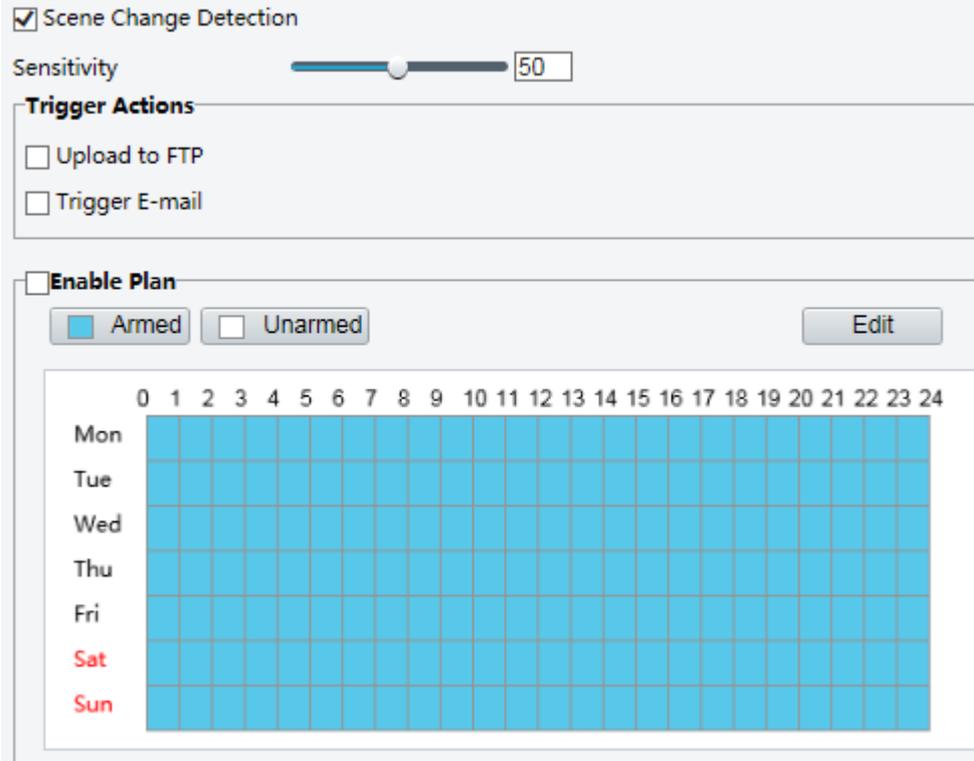

Scene Change Detection

Sensitivity 50

Trigger Actions

Upload to FTP

Trigger E-mail

Enable Plan

Armed Unarmed

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Mon	Armed																								
Tue	Armed																								
Wed	Armed																								
Thu	Armed																								
Fri	Armed																								
Sat	Armed																								
Sun	Armed																								

2. Select **Scene Change Detection**.
3. Set detection sensitivity, alarm-triggered actions and arming schedule as required. For the detailed steps and alarm-triggered actions descriptions, refer to *How to set Motion Detection Alarm*.
4. Click **Save**.