


How to set Wiper Control?

Answer:

Set wiper parameters before you can control the wiper.

Note: Note: Only some certain models support this function. Please see the actual model for details.

1. Click **Setup > System > Ports & Devices**, and then click the **External Device** tab.

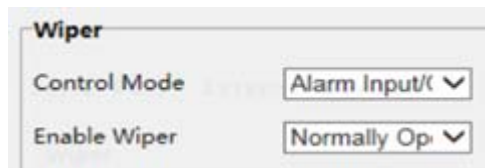

The screenshot shows a configuration window titled "Wiper". It contains two settings: "Control Mode" with a dropdown menu set to "Alarm Input/Output" and "Enable Wiper" with a dropdown menu set to "Normally Open".

2. Set control mode for the wiper. The following table describes some major parameters.

Parameter	Description
Serial Port	The wiper is controlled by PELCO-D instructions; therefore, the PTZ protocol should be set to PELCO-D. See PTZ control for details.
Alarm Input/Output	Use alarm input and output to open or close the circuit and control the wiper.



"Your Reliable Integrated Video Surveillance Solutions Provider"

Shenzhen Starlink Technology Co.,Ltd.

1811, Block A, Zhantao Technology Building, Longhua District, P.R.China 518131

Email: info@qixingtechnology.com; qixing@qixingtechnology.com

<http://www.qixingtechnology.com>

©2009-2018 Shenzhen Starlink Technology Co.,Ltd. All rights reserved.

*Product specifications and availability are subject to change without notice.