

How to backup Recording & image?

TAGS:

Video clips, footage, recording backup, backup, image backup, USB storage device, DVD-R disc, FAT32 format, NTFS format, default file format, mp4 file, TS file, export recording, save playback

Answer:

Note: This function, management page may vary with models. Please see actual Web interface for details.

Recording Backup

Backup, also known as recording backup, is the process of querying video stored on a hard disk of the NVR and then saving to a USB storage device or a DVD-R disc as a file.

Recording backup has the following conditions:

- Back up using a USB storage device: format the partition in FAT32 or NTFS format; connect the storage device correctly to the NVR.
- Back up using a disc: use a GP65NB60 DVD burner. Make sure the DVD-R disc is empty, and the burner is correctly connected to the NVR.
- Permission is required.
- The recording to back up is stored on a hard disk of the NVR.

Note: The default file format is .mp4 when you back up recordings to a USB storage device.

Note: When backing up using a disc, recordings are saved as .TS files only.

Normal Backup

1. Click **Backup > Recording**. All cameras are selected by default.
2. Set search conditions and then click **Search**. Search results are displayed.

Note: You can lock/unlock and play recording files in this window.

3. Select the desired recording(s) and then click **Backup**.
4. Select a partition.

4.1 Back up to USB storage device

Set the destination in the USB storage device and then click **Backup**. The recording(s) will be saved to the specified directory.

Note: You may want to create a new folder for the recording(s) by clicking **New Folder**.

Note: If the connected storage device has a capacity that is greater than 2T, clicking **Format** will format the device to NTFS file system; if the capacity is 2T or less, the device will be formatted to FAT32 or NTFS. Only certain devices can format a storage device that has a greater capacity than 2T.

Note: A progress bar (e.g., **Exporting X/Y**) is displayed to indicate the progress, where X indicates the current number being backed up, and Y indicates the total number of recordings. To cancel the operation, click **Cancel**.

Note: A backup file is named in this format: *camera name-recording start time*.file extension. For example, Ch9-20150630183546.mp4.

4.2 Back up to a DVD-R disc

Set the destination and then click **Backup**. The recording(s) will be saved to the specified directory.

Note: Before you start burning, check that the video to back up was not compressed using U-Code.

Note: Clicking **Cancel** before burning is finished will cause the disc unusable.

Note: When burning is finished, wait for the drive to eject itself. Do not eject the drive manually.

Note: The NVR does not support playback of recordings saved on a disc.

Video Clip Backup

A recording can be clipped and saved to a USB storage device.

1. Open the playback window.
2. After playback starts, click  and  on the playback toolbar to clip videos.
3. Click  and then click the **Video Clip** tab to view video clips.
4. Select the desired video **clip(s)** and then click **Backup**.
5. Select a destination in the USB storage device and then click **Backup**. The selected video clips are saved to the specified directory.

Image Backup

The default format of image backup is JPG.

1. Click **Backup > Image**.
2. Set search conditions and then click **Search**. Search results are displayed.

Note: The image resolution depends on the resolution from the output interface and the number of windows displayed when the snapshot is taken.

3. Select the desired file(s) and then click **Backup**.
4. Select a destination in the USB storage device and then click **Backup**. The selected files are saved to the specified directory.