 
How to set Image Enhancement?


Answer:

Note: This function may vary with models. Please see actual Web interface for details.


1. Click **Setup > Image > Image** and then click **Image Enhancement**.



2. Use the sliders to change the settings. You may also enter values directly. The following table describes some major parameters.

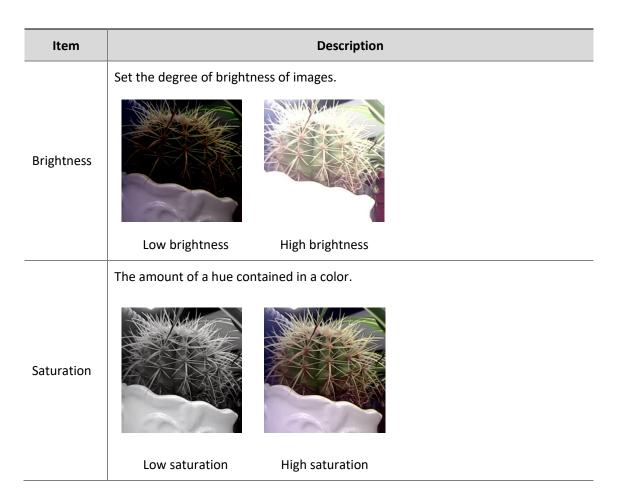

Item	Description
Contrast	Set the degree of difference between the blackest pixel and the whitest pixel. Low contrast High contrast
Sharpness	Contrast of boundaries of objects in an image. Low sharpness High sharpness
2D Noise Reduction	Reduce the noise of images. The function may cause image blurring.
3D Noise Reduction	Reduce the noise of images. The function may cause motion blur (or ghosting in some applications).
Image Rotation	Rotation of the image. Normal Flip Vertical

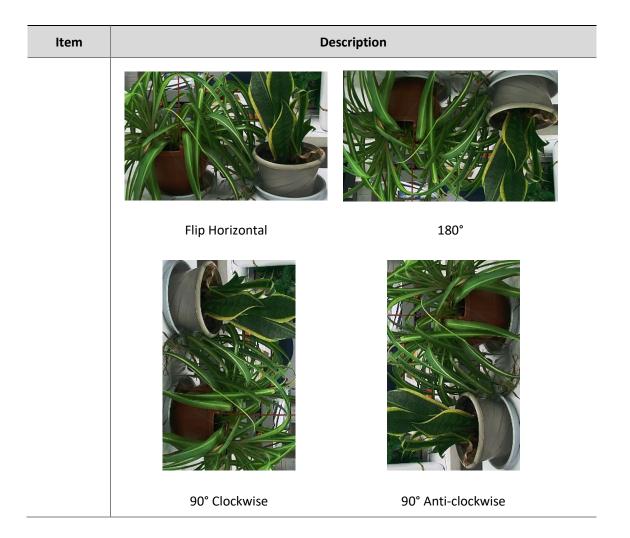

3. To restore default settings in this area, click **Defaul**t.