

## How to restart the system?

**Answer:**

Note: Perform this operation with caution because restarting the system interrupts the ongoing service.

1. Click **Setup > System > Maintenance**.



2. Under **Device Restart**, click **Restart**. The device will restart after you confirm the operation.

**TAGS:**

System maintenance, device restart, system restart



**"Your Reliable Integrated Video Surveillance Solutions Provider"**

**Shenzhen Starlink Technology Co., Ltd.**

1811, Block A, Zhantao Technology Building, Longhua District, P.R.China 518131

Email: [info@qixingtechnology.com](mailto:info@qixingtechnology.com); [qixing@qixingtechnology.com](mailto:qixing@qixingtechnology.com)

<http://www.qixingtechnology.com>

©2009-2018 Shenzhen Starlink Technology Co., Ltd. All rights reserved.

\*Product specifications and availability are subject to change without notice.